

HOW TO SOFT-WASH YOUR HOUSE

Step 1: Protect yourself and your property

- Turn off the circuit breaker switches that control the home's exterior power outlets. Shut all doors and windows and move furniture or planters away from the walls.
- Wet down with clear water shrubs, plants, and grass growing near the house before and after washing the house.
- Wear safety glasses or goggles. Do not use a pressure washer while standing on a ladder.
- Try not to spray any surface of the home while it is in direct sunlight. The sunlight may cause the cleaning solution to dry before it can be rinsed away.
- Avoid spraying a hard stream near windows and doors. This prevents the water from damaging the glass or any joints around the window and door frames.



Step 2: Mix the pro-custom soap solution

- In a clean 5-gallon bucket, pour 4 gallons of 6% Sodium Hypochlorite (SH), which is a bleach agent in a white jug, with 1 gallon of detergent, which is a brown liquid.
- Use immediately after mixing; the mixture has a "shelf life" of just a few hours.



Step 3: Soap the house

- (Safely use the pressure washer in accordance with instructions provided separately.) Put the clear pickup tube into the bucket of soap solution. It will automatically suck up the solution in the proper proportions.
- **IMPORTANT:** *Apply* the soap solution from the bottom of the siding and go up; *rinse* the siding from the top down. Do not let the soap solution dry – rinse before it dries.
- Use the soft-wash black nozzle to spray the soap solution onto low areas. Use the brass/stainless nozzle to spray higher areas.

PICKUP TUBE



SOAP NOZZLES



Step 4: Rinse the house

- **IMPORTANT:** Rinse the siding starting at the top and working downward before the soap solution dries.
- Remove the clear pickup tube from the soap solution bucket. Leave it out of the bucket, or (preferred) put it into a clean bucket of water so it is sucking clean water - or detach it.
- Use the soft-wash yellow rinse nozzle to reach higher areas that the soft-wash green nozzle won't reach.
- Use the soft-wash green rinse nozzle to reach lower areas.
- Re-rinse everything a second time.

RINSE NOZZLES

